

Montage Kettwiesel

1. Demontieren Sie den Stopfen (1) im Rohr der Sitzlehne.
2. Montieren Sie den Wimpelhalter (2) an dieser Stelle.
Hinweis: Nehmen Sie einen Schonhammer zur Hilfe um den Wimpelhalter mit dem oberen Kragen bündig in das Rohr der Sitzlehne einzutreiben.
3. Stecken Sie den Wimpel (3) in den Wimpelhalter.

Montage Kettwiesel mit Vario Komfort Sitzbezug

1. Demontieren Sie die Sitzverlängerung (4), lösen Sie dazu den obersten Riemen (5) des Sitzes.
2. Tauschen Sie den Stopfen der Sitzverlängerung gegen den mitgelieferten Stopfen (6) mit der Bohrung für den Wimpel.
3. Montieren Sie den Wimpelhalter (2) im Rohr der Sitzlehne.
Hinweis: Nehmen Sie einen Schonhammer zur Hilfe um den Wimpelhalter mit dem oberen Kragen bündig in das Rohr der Sitzlehne einzutreiben.
4. Montieren Sie die Sitzverlängerung mit dem ausgetauschten Stopfen und dem Sitzriemen.
5. Stecken Sie den Wimpel (3), durch die Bohrung im Stopfen, in den Wimpelhalter (2).

Hinweis: Wenn Sie den Wimpelhalter einige Stunden in Wasser legen, lässt er sich leichter montieren. Das Material ist hygroskopisch.


Assembly Kettwiesel

1. Remove the plug (1) in the seat backrest tube.
2. Mount the safety flag holder (2) at this point.
Note: Use a soft-face mallet to drive the upper collar of the signal flag holder flush into the tube of the seat backrest.
3. Insert the signal flag (3) into the signal flag holder.

Assembly Kettwiesel with Vario Kopfort Seat cover

1. Remove the seat extension (4) by loosening the top strap (5) of the seat.
2. Replace the plug of the seat extension with the supplied plug (6) with the hole for the signal flag.
3. Mount the signal flag holder (2) in the tube of the seat backrest.
Note: Use a soft-face mallet to drive the upper collar of the signal flag holder flush into the tube of the seat backrest.
4. Mount the seat extension with the replaced plug and the seat belt.
5. Insert the signal flag (3) into the signal flag holder (2) through the hole in the plug.

Note: If you soak the flag holder in water for a few hours, it will be easier to assemble. The material is hygroscopic.

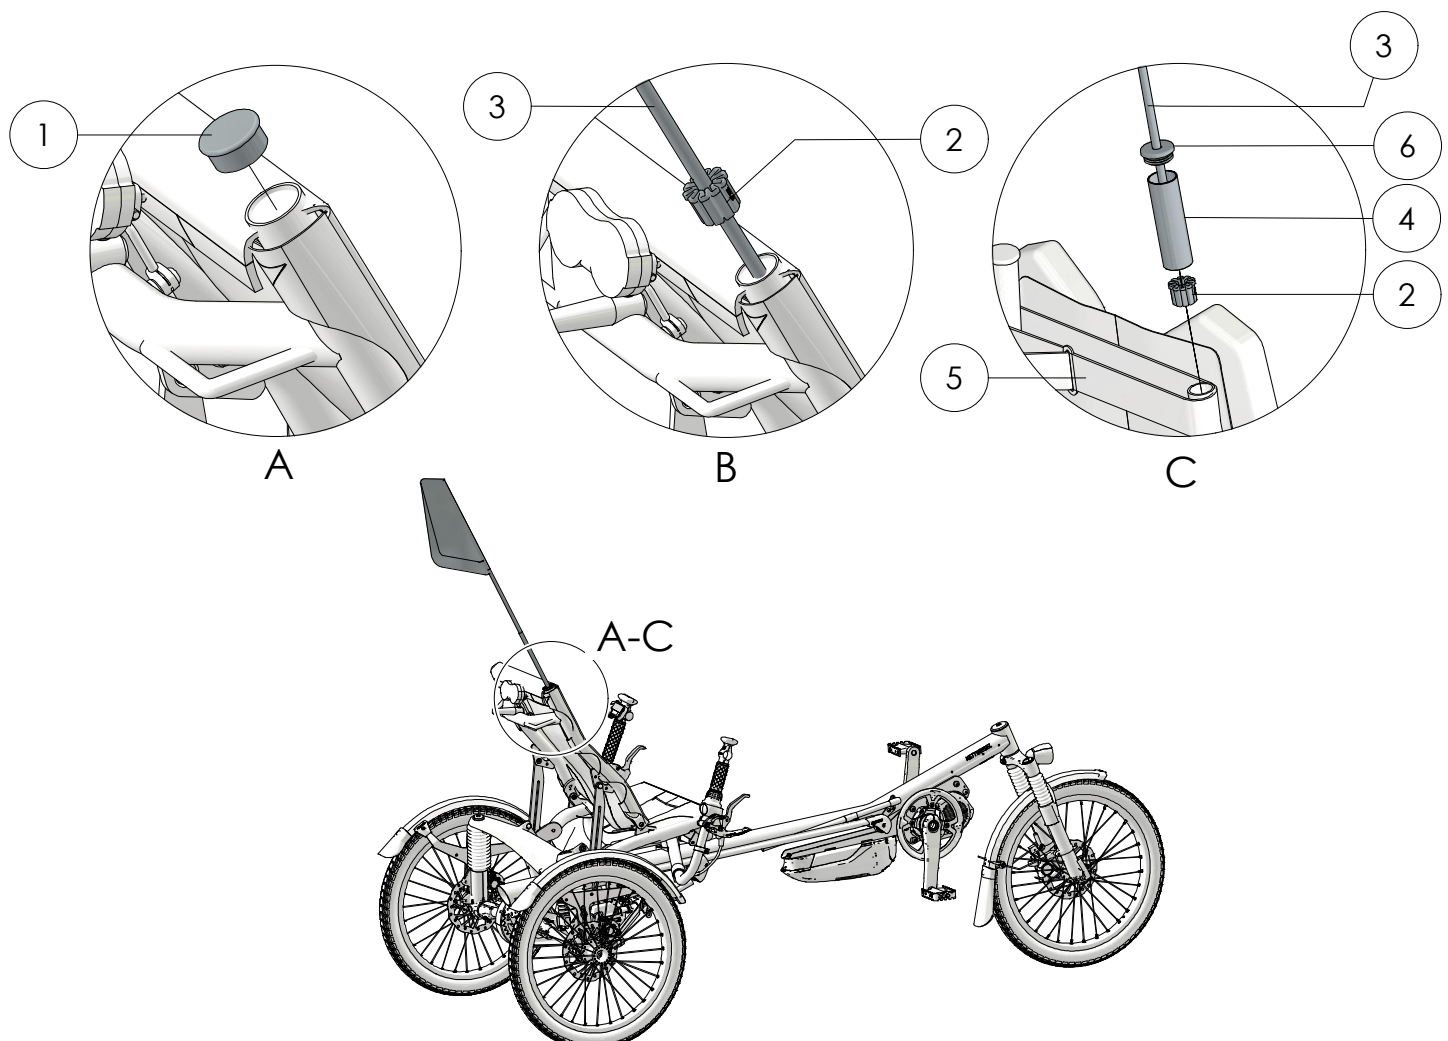

Montage Trigo

1. Kleben Sie das Griptape (1) innen in den Wimpelhalter (2).
Hinweis: Die Klebefläche sollte Staub- und Fettfrei sein.
2. Stecken Sie Stange (3) des Wimpels in den Wimpelhalter (2).
3. Fahren Sie den Wimpel etwas aus, und befestigen Sie die Klemmschraube (4).
Hinweis: Wenn der Wimpel in unterster Position zu stark geklemmt wird, lässt er sich nicht mehr ausfahren.
4. Positionieren Sie den Wimpelhalter mit Wimpel und befestigen Sie diesen mit den 2 Kabelbindern (5).
5. Schneiden Sie die Enden der Kabelbinder bündig ab.

Assembly

1. Stick the grip tape (1) inside the flag holder (2).
Note: The adhesion surface should be free of dust and grease.
2. Insert the flag rod (3) into the flag holder (2).
3. Extend the flag slightly and fasten the clamping screw (4).
Note: If the flag rod is clamped too tightly in the lowest position, it cannot be extended.
4. Position the flag holder with the flag and secure it with 2 cable ties (5).
5. Cut the ends of the cable ties flush.

